

縞枯山荘使用頻度チェック表 6月

4台右中 年月日	大 便		小 便		生ゴミ	廃食油	消費電力	消費時間	温度
	使用人数	使用量(Kg)	使用人数	使用量(L)	投入量(Kg)	投入量(g)	(KW)	(h)	(℃)
H19.6.1	0	0	0	0					4
H19.6.2	2	0.5	4	1	0.15				5
H19.6.3	0	0	0	0					8
H19.6.4	1	0.25	11	2.75					8
H19.6.5	2	0.5	7	1.75					9
H19.6.6	0	0	9	2.25					9
H19.6.7	0	0	5	1.25	0.2				7
H19.6.8	0	0	3	0.75					8
H19.6.9	8	2	26	6.5					6
H19.6.10	5	1.25	21	5.25	0.1				
H19.6.11	3	0.75	9	2.25					7
H19.6.12	2	0.5	4	1					11
H19.6.13	0	0	0	0					12
H19.6.14	1	0.25	6	1.5					11
H19.6.15	0	0	3	0.75					10
H19.6.16	0	0	4	1					10
H19.6.17	2	0.5	3	0.75	0.2				12
H19.6.18	0	0	8	2					10
H19.6.19	1	0.25	7	1.75					12
H19.6.20	0	0	3	0.75			28.3(KWh)	144(h)	13
H19.6.21	4	1	4	1					10
H19.6.22	1	0.25	0	0	0.2				10
H19.6.23	0	0	1	0.25					11
H19.6.24	0	0	1	0.25					10
H19.6.25	6	1.5	8	2					10
H19.6.26	9	2.25	25	6.25					11
H19.6.27	4	1	7	1.75					12
H19.6.28	0	0	3	0.75					11
H19.6.29	1	0.25	10	2.5	0.2				11
H19.6.30	8	2	22	5.5					11
合 計	60	15	214	53.5	1.05				

温度は朝8時の外気温

コントローラー設定値 モーター自動回転時間 5時間毎 ヒーターON30° ヒーターOFF70°
 ↓
 (3/5変更無し)

