

縞枯山荘使用頻度チェック表 6月

4台左中 年月日	大便		小便		生ゴミ	廃食油	消費電力	消費時間	温度	状態
	使用人数	使用量(Kg)	使用人数	使用量(L)	投入量(Kg)	投入量(g)	(KW)	(h)	(°C)	
H19.6.1	2	0.5	6	1.5					4	
H19.6.2	2	0.5	13	3.25	0.15				5	
H19.6.3	5	1.25	14	3.5					8	
H19.6.4	3	0.75	8	2					8	↓
H19.6.5	2	0.5	4	1					9	良
H19.6.6	0	0	1	0.25					9	
H19.6.7	6	1.5	9	2.25	0.2				7	
H19.6.8	8	2	12	3					8	
H19.6.9	3	0.75	10	2.5					6	
H19.6.10	7	1.75	9	2.25	0.2					
H19.6.11	2	0.5	6	1.5					7	
H19.6.12	1	0.25	6	1.5					11	
H19.6.13	1	0.25	1	0.25					12	
H19.6.14	0	0	3	0.75					11	
H19.6.15	5	1.25	19	4.75					10	
H19.6.16	3	0.75	15	3.75					10	
H19.6.17	5	1.25	9	2.25	0.2				12	
H19.6.18	0	0	1	0.25					10	
H19.6.19	0	0	7	1.75					12	
H19.6.20	6	1.5	15	3.75			29.1(KWh)	144(h)	13	
H19.6.21	2	0.5	9	2.25					10	
H19.6.22	2	0.5	6	1.5	0.2				10	
H19.6.23	0	0	11	2.75					11	
H19.6.24	3	0.75	10	2.5					10	
H19.6.25	1	0.25	2	0.5					10	
H19.6.26	3	0.75	12	3					11	
H19.6.27	7	1.75	11	2.75					12	
H19.6.28	1	0.25	8	2					11	
H19.6.29	3	0.75	4	1	0.2				11	
H19.6.30	3	0.75	7	1.75					11	
										↓
合計	86	21.5	248	62	1.15					

温度は朝8時の外気温

コントローラー設定値 モーター自動回転時間 5時間毎 ヒーターON30° ヒーターOFF70°
 ↓
 (3/5変更無し)