

縞枯山荘使用頻度チェック表 6月

4台中左 年月日	大 便		小 便		生ゴミ	廃食油	消費電力	消費時間	温度	状態
	使用人数	使用量(Kg)	使用人数	使用量(L)	投入量(Kg)	投入量(g)	(KW)	(h)	(℃)	
H19.6.1	0	0	11	2.75					4	
H19.6.2	2	0.5	22	5.5	0.15				5	
H19.6.3	0	0	20	5					8	
H19.6.4	3	0.75	6	1.5					8	↓
H19.6.5	0	0	0	0					9	良
H19.6.6	0	0	2	0.5					9	
H19.6.7	4	1	4	1	0.2				7	
H19.6.8	2	0.5	8	2					8	
H19.6.9	6	1.5	27	6.75					6	
H19.6.10	2	0.5	19	4.75	0.2					
H19.6.11	6	1.5	12	3					7	
H19.6.12	0	0	0	0					11	
H19.6.13	2	0.5	2	0.5					12	
H19.6.14	0	0	0	0					11	
H19.6.15	1	0.25	1	0.25					10	
H19.6.16	3	0.75	6	1.5					10	
H19.6.17	1	0.25	4	1	0.2				12	
H19.6.18	0	0	10	2.5					10	
H19.6.19	1	0.25	1	0.25					12	
H19.6.20	2	0.5	3	0.75			24.3(KWh)	144(h)	13	
H19.6.21	3	0.75	2	0.5					10	
H19.6.22	0	0	0	0	0.2				10	
H19.6.23	2	0.5	13	3.25					11	
H19.6.24	0	0	5	1.25					10	
H19.6.25	7	1.75	22	5.5					10	
H19.6.26	16	4	25	6.25					11	
H19.6.27	6	1.5	6	1.5					12	
H19.6.28	0	0	0	0					11	
H19.6.29	2	0.5	2	0.5	0.2				11	
H19.6.30	1	0.25	3	0.75					11	
										↓
合 計	72	18	236	59	1.15					

温度は朝8時の外気温

コントローラー設定値 モーター自動回転時間 5時間毎 ヒーターON30° ヒーターOFF70°
 ↓
 (3/5変更無し)