

縞枯山荘使用頻度チェック表 9月

4台左中 年月日	大便		小便		生ゴミ	廃食油	消費電力	消費時間	温度	状態
	使用人数	使用量(Kg)	使用人数	使用量(L)	投入量(Kg)	投入量(g)	(KW)	(h)	(℃)	
H19.9.1	5	1.25	22	5.5					12	
H19.9.2	8	2	28	7	0.2				12	
H19.9.3	9	2.25	40	10					16	
H19.9.4	6	1.5	22	5.5					17	↓
H19.9.5	11	2.75	39	9.75					13	良
H19.9.6	8	2	25	6.25	0.2				10	
H19.9.7	2	0.5	16	4					11	
H19.9.8	3	0.75	19	4.75					13	
H19.9.9	3	0.75	7	1.75	0.2				11	
H19.9.10	3	0.75	31	7.75					13	
H19.9.11	6	1.5	27	6.75					11	
H19.9.12	5	1.25	16	4					9	
H19.9.13	0	0	1	0.25					11	
H19.9.14	6	1.5	16	4					12	
H19.9.15	5	1.25	42	10.5					15	
H19.9.16	8	2	27	6.75					13	
H19.9.17	3	0.75	21	5.25					13	
H19.9.18	2	0.5	5	1.25	0.3				13	
H19.9.19	0	0	0	0			↓	↓	13	
H19.9.20	6	1.5	23	5.75			26.2(KWh)	144(h)	16	
H19.9.21	3	0.75	14	3.5					15	
H19.9.22	6	1.5	17	4.25	0.3				12	
H19.9.23	3	0.75	17	4.25					11	
H19.9.24	5	1.25	22	5.5					12	
H19.9.25	4	1	6	1.5	0.3				13	
H19.9.26	3	0.75	16	4					10	
H19.9.27	7	1.75	17	4.25					10	
H19.9.28	9	2.25	29	7.25					10	
H19.9.29	3	0.75	44	11					8	
H19.9.30	12	3	40	10					8	↓
合計	154	38.5	649	162.25	1.5					

温度は朝8時の外気温

コントローラー設定値 モーター自動回転時間 5時間毎 ヒーターON30° ヒーターOFF70°
 ↓
 (3/5変更無し)